

Multiple metering



Contents

Description	Page
Meter packs	2
Main devices	3
Residential meter stacks	6
Commercial meter stacks	7
Miscellaneous parts	8



Powering Business Worldwide

Meter packs

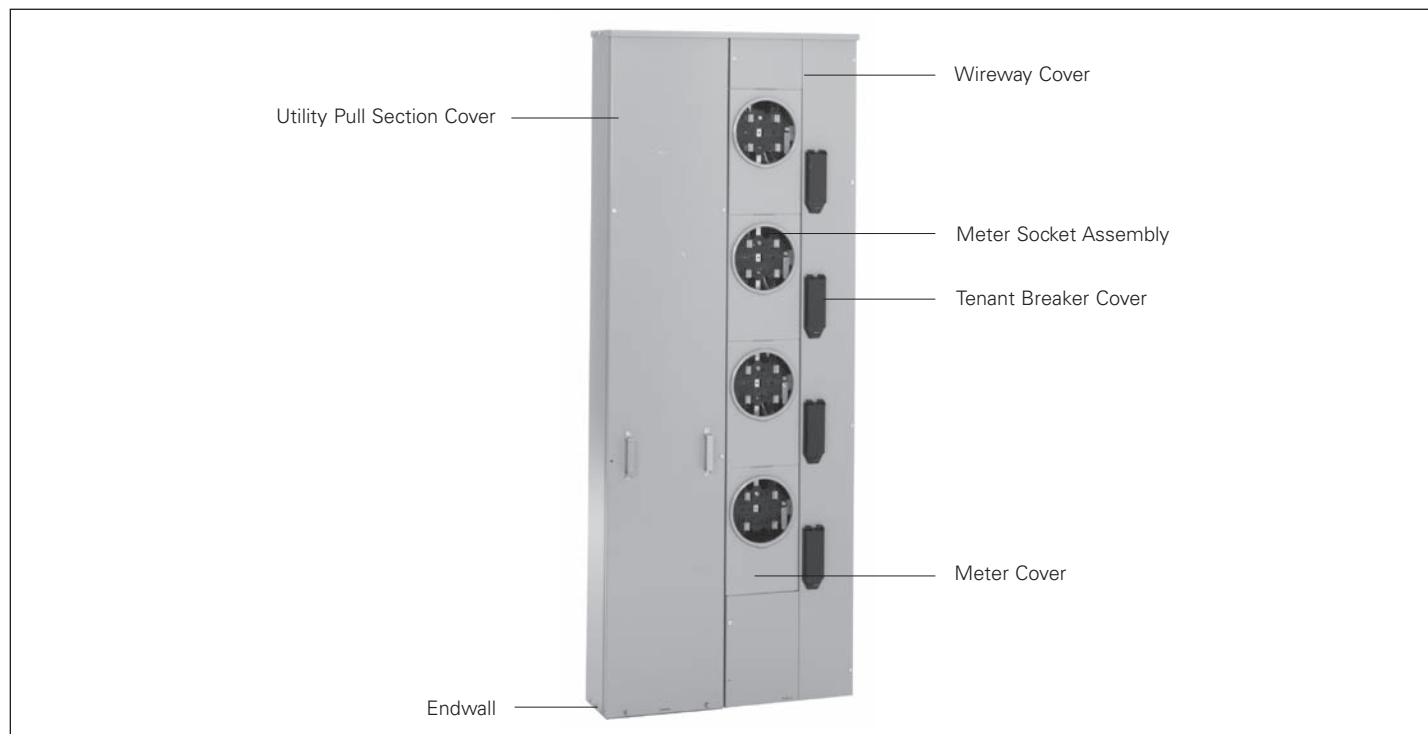 


Figure 1. Meter Pack

Table 1. Meter Packs

Catalog Numbers

Meter Pack	Utility Pull Section Cover	Wireway Cover	Meter Socket Assembly	Tenant Breaker Cover	Meter Cover	Endwall (with Knockouts)	Endwall (without Knockouts)	Vertical Busbars
1MP2122R	MP2122UCVR	MPCCVR01	1MMMS	1MMBC1	1MMCP1	MP122NWLK	MP122NWL	MM1223VBUS
1MP3124R	MP1234UCVR	MPCCVR04	1MMMS	1MMBC1	1MMCP1	MP1234NWLK	MP1234NWL	MM1223VBUS
1MP4124R	MP1234UCVR	MPCCVR05	1MMMS	1MMBC1	1MMCP1	MP1234NWLK	MP1234NWL	MM124VBUS
1MP5126R	MP1256UCVR	MPCCVR02 ①	1MMMS	1MMBC1	1MMCP1 ②	MP1256NWLK	MP1256NWL	MM1223VBUS
1MP6126R	MP1256UCVR	MPCCVR03 ①	1MMMS	1MMBC1	1MMCP1 ②	MP1256NWLK	MP1256NWL	MM1223VBUS
1MP2204R	MP202UCVR	MPCCVR06	1MMMS	1MMBC2	1MMCP2	MP2024NWLK	MP2024NWL	MM202VBUS
1MP3206R	MP2034UCVR	MPCCVR09	1MMMS	1MMBC2	1MMCP2	MP2024NWLK	MP2024NWL	MM2023VBUS
1MP4206R	MP2034UCVR	MPCCVR10	1MMMS	1MMBC2	1MMCP2	MP2024NWLK	MP2024NWL	MM204VBUS
1MP5206R	MP2056UCVR	MPCCVR07 ③	1MMMS	1MMBC2	1MMCP2	MP2056NWLK	MP2056NWL	MM2023VBUS
1MP6206R	MP2056UCVR	MPCCVR08 ③	1MMMS	1MMBC2	1MMCP2	MP2056NWLK	MP2056NWL	MM2023VBUS
1MP2122RRL ④	MP2122LUCVR	MPCCVR01	1MMMS ⑤	1MMBC1	1MMRC125 ⑥	MP122NWLK	MP122NWL	MM1223VBUS
1MP3124RRL ④	MP1234UCVR	MPCCVR04	1MMMS ⑤	1MMBC1	1MMRC125 ⑥	MP1234NWLK	MP1234NWL	MM1223VBUS
1MP4124RRL ④	MP1234UCVR	MPCCVR05	1MMMS ⑤	1MMBC1	1MMRC125	MP1234NWLK	MP1234NWL	MM124VBUS
1MP5126RRL ④	MP1256UCVR	MPCCVR02	1MMMS ⑤	1MMBC1	1MMRC125 ⑥	MP1256NWLK	MP1256NWL	MM1223VBUS
1MP6126RRL ④	MP1256UCVR	MPCCVR03	1MMMS ⑤	1MMBC1	1MMRC125 ⑥	MP1256NWLK	MP1256NWL	MM1223VBUS
1MP2204RRL ④	MP202UCVR	MPCCVR06	1MMMS ⑤	1MMBC2	1MMRC200	MP2024NWLK	MP2024NWL	MM202VBUS
1MP3206RRL ④	MP2034UCVR	MPCCVR09	1MMMS ⑤	1MMBC2	1MMRC200	MP2024NWLK	MP2024NWL	MM2023VBUS
1MP4206RRL ④	MP2034UCVR	MPCCVR10	1MMMS ⑤	1MMBC2	1MMRC200	MP2024NWLK	MP2024NWL	MM204VBUS
1MP5206RRL ④	MP2056UCVR	MPCCVR07	1MMMS ⑤	1MMBC2	1MMRC200	MP2056NWLK	MP2056NWL	MM2023VBUS
1MP6206RRL ④	MP2056UCVR	MPCCVR08	1MMMS ⑤	1MMBC2	1MMRC200	MP2056NWLK	MP2056NWL	MM2023VBUS

① For center wireway cover, order MPCENCVR1.

② For top position, use meter socket cover 1MMCP1T.

③ For center wireway cover, order MPCENCVR2.

④ For catalog numbers with a "B" suffix (ringless with horn bypass), all replacement parts are the same with the exception of the meter socket assembly. Refer to Footnote 5 for correct catalog number.

⑤ For ringless style meter packs with horn bypass, order 1MMMSB.

⑥ For top position, use meter socket cover 1MMRC125T.

Main devices

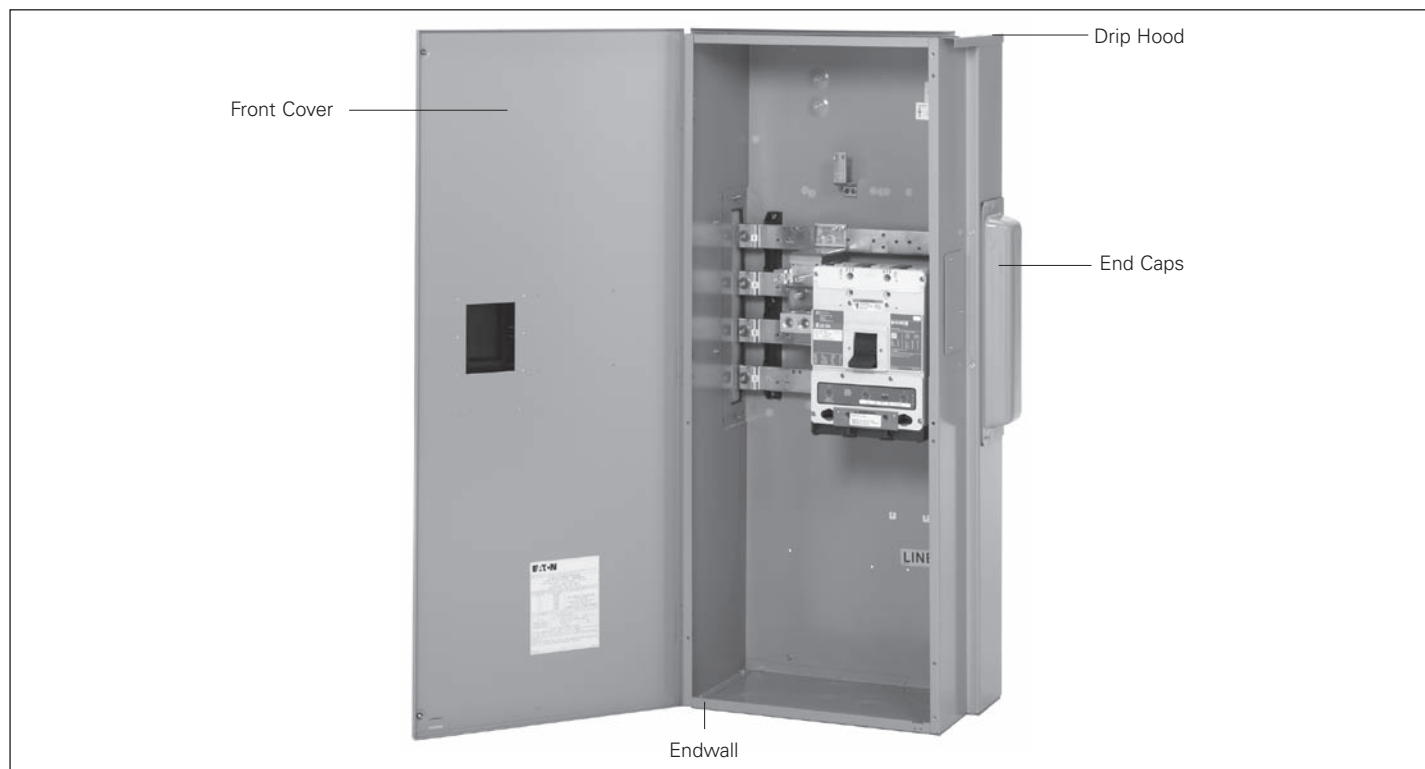 


Figure 2. Main Device Panel

Table 2. End Caps

Description	Catalog Numbers
Right side (bumped)	47-28172-2A
Left side (flat)	47-24139A

Table 3. Terminal Box

Catalog Numbers				
Terminal Box	Front Cover	Drip Hood	Endwall (with Knockouts)	Endwall (without Knockouts)
1MTB800R	MMFCVR1	MMDH1	MMEW1	MMEWVK01
1MTB1200R	MMFCVR1	MMDH1	MMEW1	MMEWVK01
3MTB400R	MTBFCVR1	MMDH4	MTBEW1	MTBEWVK01
3MTB600R	MTBFCVR1	MMDH4	MTBEW1	MTBEWVK01
3MTB800R	MMFCVR1	MMDH1	MMEW1	MMEWVK01
3MBT1200R	MMFCVR1	MMDH1	MMEW1	MMEWVK01

Effective January 2012

Main devices (continued)**Table 4. Main Circuit Breaker****Catalog Numbers**

Circuit Breaker	Front Cover	Drip Hood	Endwall (with Knockouts)	Endwall (without Knockouts)
1MCB250R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
1MHCB250R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
1MCB300R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
1MHCB300R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
1MCB350R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
1MHCB350R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
1MCB400R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
1MHCB400R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
1MCB500R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
1MHCB500R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
1MCB600R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
1MHCB600R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
1MCB700R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
1MHCB700R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
1MCB800R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
1MHCB800R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
1MCB900R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
1MHCB900R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
1MCB1000R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
1MHCB1000R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
1MCB1200R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
1MHCB1200R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
1MCB1400RB	MCBFCVR3	MCBDH1	—	MMEWVK03
1MCB1400RT	MCBFCVR3	MCBDH1	—	MMEWVK03
1MCB1600RB	MCBFCVR3	MCBDH1	—	MMEWVK03
1MCB1600RT	MCBFCVR3	MCBDH1	—	MMEWVK03
1MCB2000RB	MCBFCVR3	MCBDH1	—	MMEWVK03
1MCB2000RT	MCBFCVR3	MCBDH1	—	MMEWVK03
3MCB250R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
3MHCB250R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
3MCB300R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
3MHCB300R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
3MCB350R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
3MHCB350R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
3MCB400R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
3MHCB400R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
3MCB500R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
3MHCB500R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
3MCB600R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
3MHCB600R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
3MCB700R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
3MHCB700R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
3MCB800R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
3MHCB800R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
3MCB900R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
3MHCB900R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
3MCB1000R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
3MHCB1000R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
3MCB1200R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
3MHCB1200R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
3MCB1400RB	MCBFCVR3	MCBDH1	—	MMEWVK03
3MCB1400RT	MCBFCVR3	MCBDH1	—	MMEWVK03
3MCB1600RB	MCBFCVR3	MCBDH1	—	MMEWVK03
3MCB1600RT	MCBFCVR3	MCBDH1	—	MMEWVK03
3MCB2000RB	MCBFCVR3	MCBDH1	—	MMEWVK03
3MCB2000RT	MCBFCVR3	MCBDH1	—	MMEWVK03

Main devices (continued)

Table 5. Main Fusible Switch

Catalog Numbers

Fusible Switch	Front Cover	Drip Hood	Endwall (with Knockouts)	Endwall (without Knockouts)
1MFS400RB	MMFCVR1	MMDH1	MMEW1	MMEWVK01
1MFS400RT	MFSFCVR1	MMDH1	—	MMEWVK01
1MFS600RB	MMFCVR1	MMDH1	MMEW1	MMEWVK01
1MFS600RT	MFSFCVR1	MMDH1	—	MMEWVK01
1MFS800RB	MMFCVR1	MMDH1	MMEW1	MMEWVK01
1MFS800RT	MFSFCVR1	MMDH1	—	MMEWVK01
1MFS1200RB	MFSFCVR2	MMDH2	MMEW2	MMEWVK02
3MFS400RB	MMFCVR1	MMDH1	MMEW1	MMEWVK01
3MFS400RT	MFSFCVR1	MMDH1	—	MMEWVK01
3MFS600RB	MMFCVR1	MMDH1	MMEW1	MMEWVK01
3MFS600RT	MFSFCVR1	MMDH1	—	MMEWVK01
3MFS800RB	MMFCVR1	MMDH1	MMEW1	MMEWVK01
3MFS800RT	MFSFCVR1	MMDH1	—	MMEWVK01
3MFS1200RB	MFSFCVR2	MMDH2	MMEW2	MMEWVK02

Table 6. Main Bolted Pressure Contact Switch

Catalog Numbers

Bolted Pressure Contact Switch	Front Cover	Drip Hood	Endwall (with Knockouts)	Endwall (without Knockouts)
1BPS1200RB	No replacement parts available at this time.			
1BPS1200RT				
3BPS1200RB				
3BPS1200RT				
3BPS1600RB				
3BPS1600RT				
3BPS2000RB				
3BPS2000RT				

Table 7. Main Fusible Switch with Pullbox

Catalog Numbers

Fusible Switch with Pullbox	Front Cover	Pullbox Cover	Drip Hood	Endwall (with Knockouts)	Endwall (without Knockouts)
1MFS400RUG	MFPFCVR1	MFPBCVR1	MMDH1	MMEW1	MMEWVK01
1MFS600RUG	MFPFCVR1	MFPBCVR1	MMDH1	MMEW1	MMEWVK01
1MFS800RUG	MFPFCVR1	MFPBCVR1	MMDH1	MMEW1	MMEWVK01
1MFS1200RUG	MFPFCVR2	MFPBCVR2	MMDH2	MMEW2	MMEWVK02
3MFS400RUG	MFPFCVR1	MFPBCVR1	MMDH1	MMEW1	MMEWVK01
3MFS600RUG	MFPFCVR3	MFPBCVR3	MMDH5	MMEW4	MMEWVK04
3MFS800RUG	MFPFCVR3	MFPBCVR3	MMDH5	MMEW4	MMEWVK04
3MFS1200RUG	MFPFCVR2	MFPBCVR2	MMDH2	MMEW2	MMEWVK02

Table 8. Pullbox

Catalog Numbers

Pullbox	Front Cover/Pullbox Cover	Drip Hood	Endwall (with Knockouts)	Endwall (without Knockouts)
1UGPB400R	PBFCVR1	PBDH1	PBEW1	PBEWVK01
1UGPB800R	PBFCVR2	PBDH2	PBEW2	PBEWVK02
1UGPB1200R	PBFCVR3	PBDH3	PBEW3	PBEWVK03
3UGPB400R	PBFCVR1	PBDH1	PBEW1	PBEWVK01
3UGPB800R	PBFCVR2	PBDH2	PBEW2	PBEWVK02
3UGPB1200R	PBFCVR3	PBDH3	PBEW3	PBEWVK03

Residential meter stacks

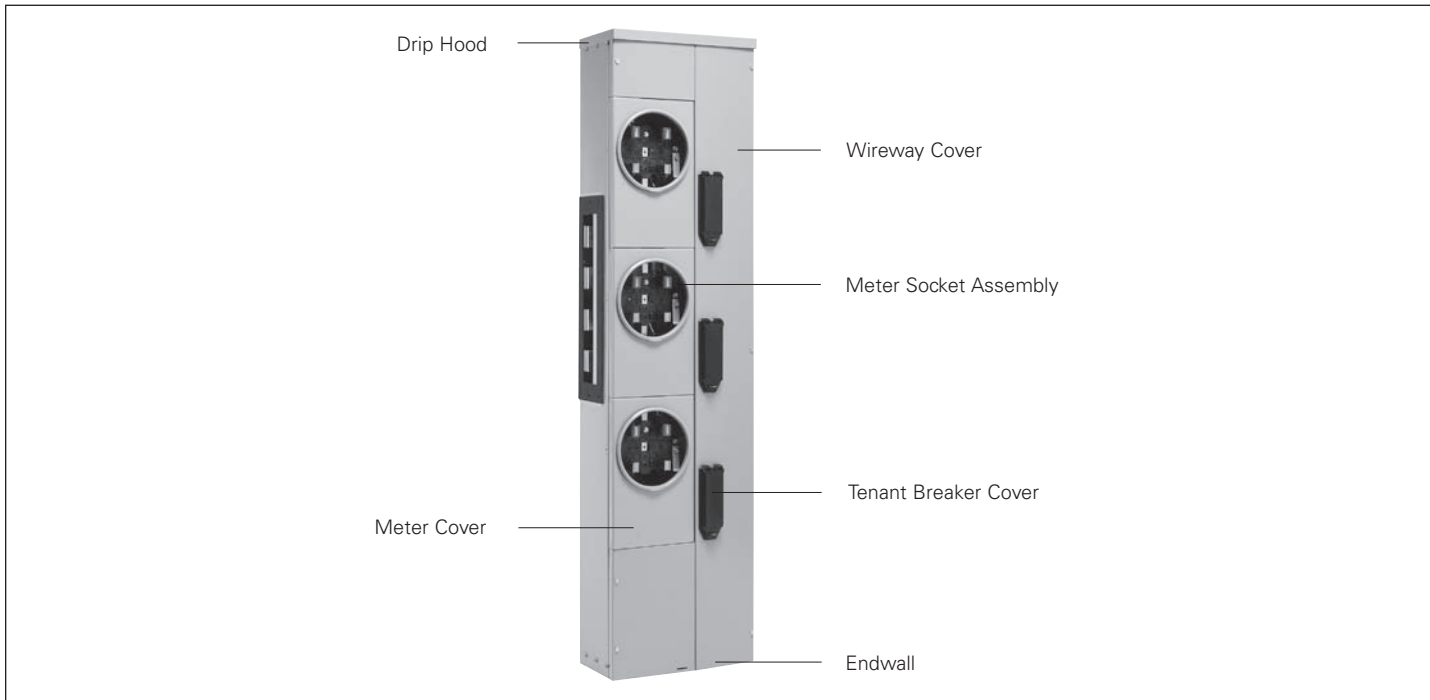 


Figure 3. Residential Meter Stack

Table 9. Residential Meter Stacks

Catalog Numbers

Meter Stack	Wireway Cover	Meter Socket Assembly	Tenant Breaker Cover	Meter Cover	Drip Hood	Endwall (with Knockouts)	Endwall (without Knockouts)	Vertical Busbar
3MM212	MMCCVR2123	—	①	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM1223VBUS
3MM212R	MMCCVR2123R	1MMMS	1MMBC1	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM1223VBUS
1MM312	MMCCVR3121	1MMMS	①	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM1223VBUS
1MM312R	MMCCVR3121R	1MMMS	1MMBC1	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM1223VBUS
3MM312	MMCCVR3123	1MMMS	①	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM1223VBUS
3MM312R	MMCCVR3123R	1MMMS	1MMBC1	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM1223VBUS
1MM412	MMCCVR4121	1MMMS	①	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM124VBUS
1MM412R	MMCCVR4121R	1MMMS	1MMBC1	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM124VBUS
3MM412	MMCCVR4123	1MMMS	①	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM124VBUS
3MM412R	MMCCVR4123R	1MMMS	1MMBC1	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM124VBUS
1MM512	MMCCVR5121	1MMMS	①	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM125VBUS
1MM512R	MMCCVR5121R	1MMMS	1MMBC1	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM125VBUS
3MM512	MMCCVR5123	1MMMS	①	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM125VBUS
3MM512R	MMCCVR5123R	1MMMS	1MMBC1	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM125VBUS
1MM612	MMCCVR6121	1MMMS	①	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM126VBUS
1MM612R	MMCCVR6121R	1MMMS	1MMBC1	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM126VBUS
3MM612	MMCCVR6123	1MMMS	①	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM126VBUS
3MM612R	MMCCVR6123R	1MMMS	1MMBC1	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM126VBUS
3MM220	MMCCVR2203	1MMMS	①	1MMCP2	MMDH4	MM20N1WLK	MM20N1WL	MM2023VBUS
3MM220R	MMCCVR2203R	1MMMS	1MMBC2	1MMCP2	MMDH4	MM20N1WLK	MM20N1WL	MM2023VBUS
1MM320	MMCCVR3201	1MMMS	①	1MMCP2	MMDH4	MM20N1WLK	MM20N1WL	MM2023VBUS
1MM320R	MMCCVR3201R	1MMMS	1MMBC2	1MMCP2	MMDH4	MM20N1WLK	MM20N1WL	MM2023VBUS
3MM320	MMCCVR3203	1MMMS	①	1MMCP2	MMDH4	MM20N1WLK	MM20N1WL	MM2023VBUS
3MM320R	MMCCVR3203R	1MMMS	1MMBC2	1MMCP2	MMDH4	MM20N1WLK	MM20N1WL	MM2023VBUS
1MM420	MMCCVR4201	1MMMS	①	1MMCP2	MMDH4	MM20N1WLK	MM20N1WL	MM204VBUS
1MM420R	MMCCVR4201R	1MMMS	1MMBC2	1MMCP2	MMDH4	MM20N1WLK	MM20N1WL	MM204VBUS

① NEMA® 1 meter stacks do not come with breaker covers.

Residential meter stacks (continued)**Table 9. Residential Meter Stacks (Continued)****Catalog Numbers**

Meter Stack	Wireway Cover	Meter Socket Assembly	Tenant Breaker Cover	Meter Cover	Drip Hood	Endwall (with Knockouts)	Endwall (without Knockouts)	Vertical Busbar
3MM420	MMCCVR4203	1MMMS	①	1MMCP2	MMDH4	MM20N1WLK	MM20N1WL	MM204VBUS
3MM420R	MMCCVR4203R	1MMMS	1MMBC2	1MMCP2	MMDH4	MM20N1WLK	MM20N1WL	MM204VBUS
3MM212RRL ②	MMCCVR2123R	1MMMS ③	1MMBC1	1MMRC125 ④	MMDH3	MM12NWLK	MM12NWL	MM1223VBUS
1MM312RRL ②	MMCCVR3121R	1MMMS ③	1MMBC1	1MMRC125 ④	MMDH3	MM12NWLK	MM12NWL	MM1223VBUS
3MM312RRL ②	MMCCVR3123R	1MMMS ③	1MMBC1	1MMRC125 ④	MMDH3	MM12NWLK	MM12NWL	MM1223VBUS
1MM412RRL ②	MMCCVR3121R	1MMMS ③	1MMBC1	1MMRC125 ④	MMDH3	MM12NWLK	MM12NWL	MM124VBUS
3MM412RRL ②	MMCCVR4123R	1MMMS ③	1MMBC1	1MMRC125 ④	MMDH3	MM12NWLK	MM12NWL	MM124VBUS
1MM512RRL ②	MMCCVR5121R	1MMMS ③	1MMBC1	1MMRC125 ④	MMDH3	MM12NWLK	MM12NWL	MM125VBUS
3MM512RRL ②	MMCCVR5123R	1MMMS ③	1MMBC1	1MMRC125 ④	MMDH3	MM12NWLK	MM12NWL	MM125VBUS
1MM612RRL ②	MMCCVR6121R	1MMMS ③	1MMBC1	1MMRC125 ④	MMDH3	MM12NWLK	MM12NWL	MM126VBUS
3MM612RRL ②	MMCCVR6123R	1MMMS ③	1MMBC1	1MMRC125 ④	MMDH3	MM12NWLK	MM12NWL	MM126VBUS
3MM220RRL ②	MMCCVR2203R	1MMMS ③	1MMBC2	1MMRC200	MMDH4	MM20NWLK	MM20NWL	MM2023VBUS
1MM320RRL ②	MMCCVR3201R	1MMMS ③	1MMBC2	1MMRC200	MMDH4	MM20NWLK	MM20NWL	MM2023VBUS
3MM320RRL ②	MMCCVR3203R	1MMMS ③	1MMBC2	1MMRC200	MMDH4	MM20NWLK	MM20NWL	MM2023VBUS
1MM420RRL ②	MMCCVR4201R	1MMMS ③	1MMBC2	1MMRC200	MMDH4	MM20NWLK	MM20NWL	MM204VBUS
3MM420RRL ②	MMCCVR4203R	1MMMS ③	1MMBC2	1MMRC200	MMDH4	MM20NWLK	MM20NWL	MM204VBUS

① NEMA® 1 meter stacks do not come with breaker covers.

② For catalog numbers with a "B" suffix (ringless with horn bypass), all replacement parts are the same with the exception of the meter socket assembly. Refer to Footnote 2 for correct catalog number.

③ For ringless style meter stacks with horn bypass, order 1MMMSB meter socket assembly.

④ For top position, use meter socket cover 1MMRC125T.

Commercial meter stacks**Table 10. Commercial Meter Stacks (Lever Bypass)****Catalog Numbers**

Meter Stack	Wireway Cover	Wireway Cover	Meter Socket Assembly	Tenant Breaker Cover	Meter Cover	Meter Cover	Drip Hood	Endwall (with Knockouts)	Endwall (without Knockouts)
35MM120R12	MSLWCVR1	—	MSLMSA1	MSBCVR1	MSLMCVR1 ①	37MMSK1 ②	MSLDH1	—	MSLEW1
35MM220R12	MSLWCVR2	—	MSLMSA1	MSBCVR1	MSLMCVR1 ①	37MMSK1 ②	MSLDH1	—	MSLEW1
35MM320R12	MSLWCVR3	—	MSLMSA1	MSBCVR1	MSLMCVR1 ①	37MMSK1 ②	MSLDH1	—	MSLEW1
35MM420R12	MSLWCVR4 ①	MSLWCVR13 ②	MSLMSA1	MSBCVR1	MSLMCVR1 ①	37MMSK1 ②	MSLDH2	—	MSLEW2
37MM140R12	MSLWCVR9 ①	MSLWCVR14 ②	MSLMSA2	MSBCVR1	MSLMCVR1 ①	37MMSK1 ②	MSLDH1	—	MSLEW1
37MM120R12	MSLWCVR5 ①	MSLWCVR15 ②	MSLMSA2	MSBCVR1	MSLMCVR1 ①	37MMSK1 ②	MSLDH1	—	MSLEW1
37MM220R12	MSLWCVR6 ①	MSLWCVR16 ②	MSLMSA2	MSBCVR1	MSLMCVR1 ①	37MMSK1 ②	MSLDH1	—	MSLEW1
37MM320R12	MSLWCVR7 ①	MSLWCVR17 ②	MSLMSA2	MSBCVR1	MSLMCVR1 ①	37MMSK1 ②	MSLDH1	—	MSLEW1
37MM420R12	MSLWCVR8 ①	MSLWCVR18 ②	MSLMSA2	MSBCVR1	MSLMCVR1 ①	37MMSK1 ②	MSLDH2	—	MSLEW2

① Used for product built October 2002 and prior.

② Used for product built after October 2002.

Commercial meter stacks (continued)**Table 11. Commercial Meter Stack (Test Bypass)****Catalog Numbers**

Meter Stack	Wireway Cover	Meter Socket Assembly	Tenant Breaker Cover	Meter Cover	Drip Hood	Endwall (with Knockouts)	Endwall (without Knockouts)
35SS120RAB	MSTWCVR1	MSTMSA1	MSBCVR1	MSTMCVR1	MSTDH1	MSTEW1	MSTEWNK01
35SS120RAC	MSTWCVR2	MSTMSA1	MSBCVR1	MSTMCVR1	MSTDH1	MSTEW1	MSTEWNK01
35SS120RBC	MSTWCVR3	MSTMSA1	MSBCVR1	MSTMCVR1	MSTDH1	MSTEW1	MSTEWNK01
35SS220RAB	MSTWCVR4	MSTMSA1	MSBCVR1	MSTMCVR1	MSTDH1	MSTEW2	MSTEWNK02
35SS220RAC	MSTWCVR5	MSTMSA1	MSBCVR1	MSTMCVR1	MSTDH1	MSTEW2	MSTEWNK02
35SS220RBC	MSTWCVR6	MSTMSA1	MSBCVR1	MSTMCVR1	MSTDH1	MSTEW2	MSTEWNK02
35SS320RAB	MSTWCVR7	MSTMSA1	MSBCVR1	MSTMCVR1	MSTDH1	MSTEW2	MSTEWNK02
35SS320RAC	MSTWCVR8	MSTMSA1	MSBCVR1	MSTMCVR1	MSTDH1	MSTEW2	MSTEWNK02
35SS320RBC	MSTWCVR9	MSTMSA1	MSBCVR1	MSTMCVR1	MSTDH1	MSTEW2	MSTEWNK02
37SS120R	MSTWCVR10	MSTMSA2	MSBCVR1	MSTMCVR1	MSTDH1	MSTEW1	MSTEWNK01
37SS220R	MSTWCVR11	MSTMSA2	MSBCVR1	MSTMCVR1	MSTDH1	MSTEW2	MSTEWNK02
37SS320R	MSTWCVR12	MSTMSA2	MSBCVR1	MSTMCVR1	MSTDH1	MSTEW2	MSTEWNK02

Miscellaneous parts**Table 12. Miscellaneous Parts**

Description	Part Number
Phase balancing kit, single-phase commercial metering	99-4177-3
A and C phase balancing kit (3MM)	99-4184
Breaker mounting kit, commercial metering (one three-pole breaker per kit)	99-4176-2
Breaker mounting kit, 1MM/1MP, 200A, (one two-pole breaker per kit)	99-4176
Mounting kit, meter center	99-4172
Mounting kit, meter pack	99-4173
Bonding strap kit, all meter packs (except CECHA three and four socket)	99-4174
Bonding strap kit, CHECA three and four socket meter packs	99-2379
Sealing screw kit, ringless devices (six screws)	99-4175
Sealing screw kit, three and four meter sockets, ringless devices (four screws)	99-2589
Padlock bracket	99-2512-5
Mounting bracket kit—All breaker and fusible mains	99-4183
Mounting bracket kit—400A and 600A 3MTB	99-4183-3
Exterior breaker cover	49-6070

Eaton Corporation
 Electrical Sector
 1111 Superior Ave.
 Cleveland, OH 44114
 United States
 Eaton.com

© 2012 Eaton Corporation
 All Rights Reserved
 Printed in USA
 Publication No. RP00501001E / Z11822
 January 2012

Eaton is a registered trademark
 of Eaton Corporation.

All other trademarks are property
 of their respective owners.

Multiple metering



Contents

Description	Page
Meter packs	2
Main devices	3
Residential meter stacks	6
Commercial meter stacks	7
Miscellaneous parts	8



Powering Business Worldwide

Meter packs

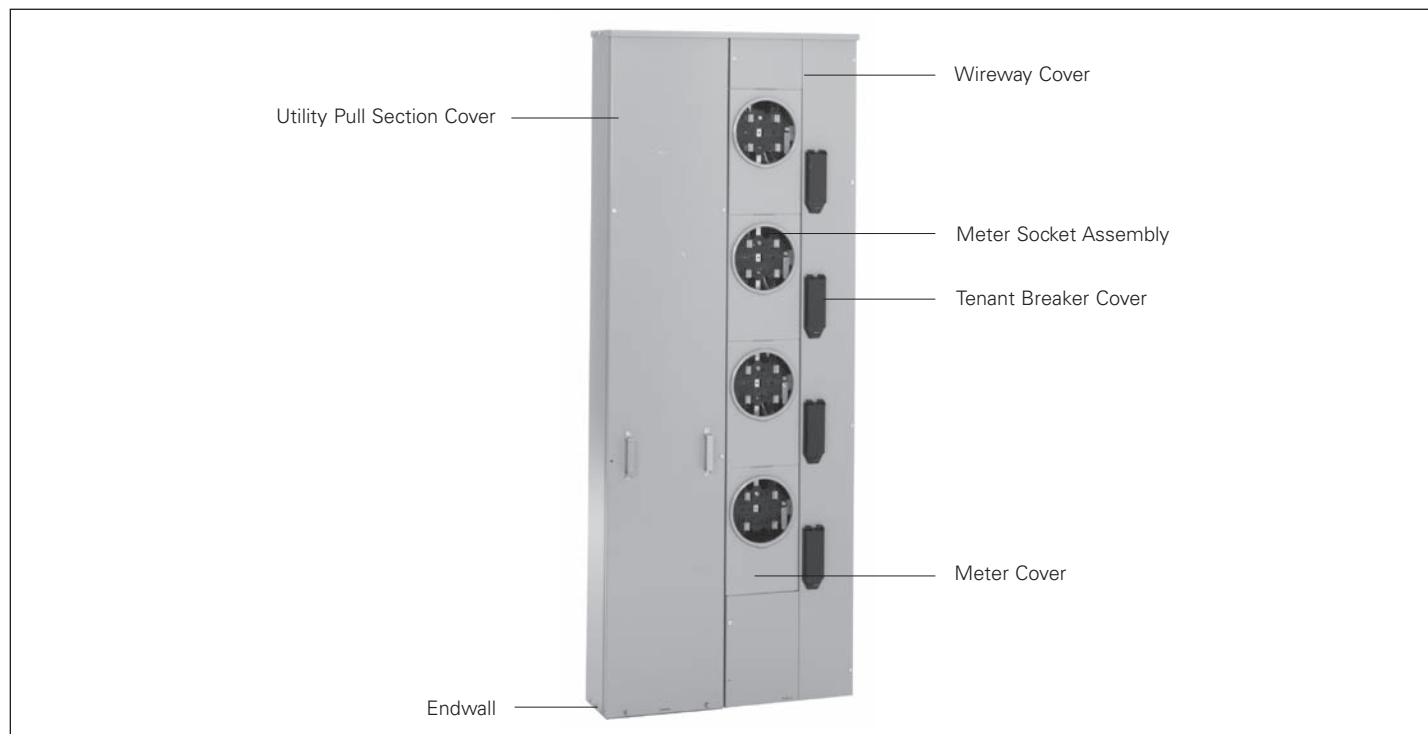 


Figure 1. Meter Pack

Table 1. Meter Packs

Catalog Numbers

Meter Pack	Utility Pull Section Cover	Wireway Cover	Meter Socket Assembly	Tenant Breaker Cover	Meter Cover	Endwall (with Knockouts)	Endwall (without Knockouts)	Vertical Busbars
1MP2122R	MP2122UCVR	MPCCVR01	1MMMS	1MMBC1	1MMCP1	MP122NWLK	MP122NWL	MM1223VBUS
1MP3124R	MP1234UCVR	MPCCVR04	1MMMS	1MMBC1	1MMCP1	MP1234NWLK	MP1234NWL	MM1223VBUS
1MP4124R	MP1234UCVR	MPCCVR05	1MMMS	1MMBC1	1MMCP1	MP1234NWLK	MP1234NWL	MM124VBUS
1MP5126R	MP1256UCVR	MPCCVR02 ①	1MMMS	1MMBC1	1MMCP1 ②	MP1256NWLK	MP1256NWL	MM1223VBUS
1MP6126R	MP1256UCVR	MPCCVR03 ①	1MMMS	1MMBC1	1MMCP1 ②	MP1256NWLK	MP1256NWL	MM1223VBUS
1MP2204R	MP202UCVR	MPCCVR06	1MMMS	1MMBC2	1MMCP2	MP2024NWLK	MP2024NWL	MM202VBUS
1MP3206R	MP2034UCVR	MPCCVR09	1MMMS	1MMBC2	1MMCP2	MP2024NWLK	MP2024NWL	MM2023VBUS
1MP4206R	MP2034UCVR	MPCCVR10	1MMMS	1MMBC2	1MMCP2	MP2024NWLK	MP2024NWL	MM204VBUS
1MP5206R	MP2056UCVR	MPCCVR07 ③	1MMMS	1MMBC2	1MMCP2	MP2056NWLK	MP2056NWL	MM2023VBUS
1MP6206R	MP2056UCVR	MPCCVR08 ③	1MMMS	1MMBC2	1MMCP2	MP2056NWLK	MP2056NWL	MM2023VBUS
1MP2122RRL ④	MP2122LUCVR	MPCCVR01	1MMMS ⑤	1MMBC1	1MMRC125 ⑥	MP122NWLK	MP122NWL	MM1223VBUS
1MP3124RRL ④	MP1234UCVR	MPCCVR04	1MMMS ⑤	1MMBC1	1MMRC125 ⑥	MP1234NWLK	MP1234NWL	MM1223VBUS
1MP4124RRL ④	MP1234UCVR	MPCCVR05	1MMMS ⑤	1MMBC1	1MMRC125	MP1234NWLK	MP1234NWL	MM124VBUS
1MP5126RRL ④	MP1256UCVR	MPCCVR02	1MMMS ⑤	1MMBC1	1MMRC125 ⑥	MP1256NWLK	MP1256NWL	MM1223VBUS
1MP6126RRL ④	MP1256UCVR	MPCCVR03	1MMMS ⑤	1MMBC1	1MMRC125 ⑥	MP1256NWLK	MP1256NWL	MM1223VBUS
1MP2204RRL ④	MP202UCVR	MPCCVR06	1MMMS ⑤	1MMBC2	1MMRC200	MP2024NWLK	MP2024NWL	MM202VBUS
1MP3206RRL ④	MP2034UCVR	MPCCVR09	1MMMS ⑤	1MMBC2	1MMRC200	MP2024NWLK	MP2024NWL	MM2023VBUS
1MP4206RRL ④	MP2034UCVR	MPCCVR10	1MMMS ⑤	1MMBC2	1MMRC200	MP2024NWLK	MP2024NWL	MM204VBUS
1MP5206RRL ④	MP2056UCVR	MPCCVR07	1MMMS ⑤	1MMBC2	1MMRC200	MP2056NWLK	MP2056NWL	MM2023VBUS
1MP6206RRL ④	MP2056UCVR	MPCCVR08	1MMMS ⑤	1MMBC2	1MMRC200	MP2056NWLK	MP2056NWL	MM2023VBUS

① For center wireway cover, order MPCENCVR1.

② For top position, use meter socket cover 1MMCP1T.

③ For center wireway cover, order MPCENCVR2.

④ For catalog numbers with a "B" suffix (ringless with horn bypass), all replacement parts are the same with the exception of the meter socket assembly. Refer to Footnote 5 for correct catalog number.

⑤ For ringless style meter packs with horn bypass, order 1MMMSB.

⑥ For top position, use meter socket cover 1MMRC125T.

Main devices

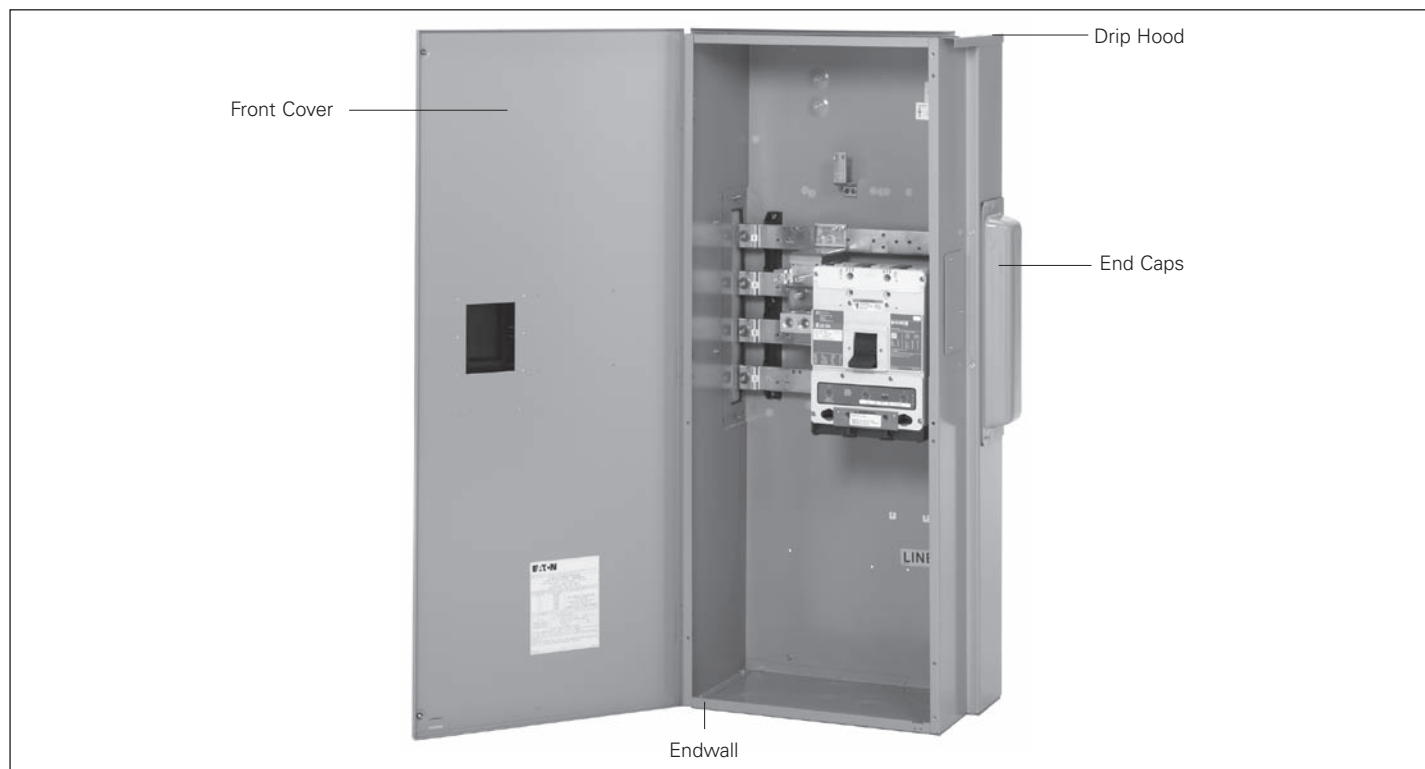 


Figure 2. Main Device Panel

Table 2. End Caps

Description	Catalog Numbers
Right side (bumped)	47-28172-2A
Left side (flat)	47-24139A

Table 3. Terminal Box

Catalog Numbers				
Terminal Box	Front Cover	Drip Hood	Endwall (with Knockouts)	Endwall (without Knockouts)
1MTB800R	MMFCVR1	MMDH1	MMEW1	MMEWNK01
1MTB1200R	MMFCVR1	MMDH1	MMEW1	MMEWNK01
3MTB400R	MTBFCVR1	MMDH4	MTBEW1	MTBEWNK01
3MTB600R	MTBFCVR1	MMDH4	MTBEW1	MTBEWNK01
3MTB800R	MMFCVR1	MMDH1	MMEW1	MMEWNK01
3MBT1200R	MMFCVR1	MMDH1	MMEW1	MMEWNK01

Effective January 2012

Main devices (continued)**Table 4. Main Circuit Breaker****Catalog Numbers**

Circuit Breaker	Front Cover	Drip Hood	Endwall (with Knockouts)	Endwall (without Knockouts)
1MCB250R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
1MHCB250R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
1MCB300R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
1MHCB300R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
1MCB350R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
1MHCB350R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
1MCB400R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
1MHCB400R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
1MCB500R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
1MHCB500R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
1MCB600R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
1MHCB600R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
1MCB700R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
1MHCB700R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
1MCB800R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
1MHCB800R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
1MCB900R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
1MHCB900R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
1MCB1000R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
1MHCB1000R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
1MCB1200R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
1MHCB1200R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
1MCB1400RB	MCBFCVR3	MCBDH1	—	MMEWVK03
1MCB1400RT	MCBFCVR3	MCBDH1	—	MMEWVK03
1MCB1600RB	MCBFCVR3	MCBDH1	—	MMEWVK03
1MCB1600RT	MCBFCVR3	MCBDH1	—	MMEWVK03
1MCB2000RB	MCBFCVR3	MCBDH1	—	MMEWVK03
1MCB2000RT	MCBFCVR3	MCBDH1	—	MMEWVK03
3MCB250R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
3MHCB250R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
3MCB300R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
3MHCB300R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
3MCB350R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
3MHCB350R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
3MCB400R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
3MHCB400R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
3MCB500R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
3MHCB500R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
3MCB600R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
3MHCB600R	MCBFCVR1	MMDH1	MMEW1	MMEWVK01
3MCB700R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
3MHCB700R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
3MCB800R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
3MHCB800R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
3MCB900R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
3MHCB900R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
3MCB1000R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
3MHCB1000R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
3MCB1200R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
3MHCB1200R	MCBFCVR2	MMDH1	MMEW1	MMEWVK01
3MCB1400RB	MCBFCVR3	MCBDH1	—	MMEWVK03
3MCB1400RT	MCBFCVR3	MCBDH1	—	MMEWVK03
3MCB1600RB	MCBFCVR3	MCBDH1	—	MMEWVK03
3MCB1600RT	MCBFCVR3	MCBDH1	—	MMEWVK03
3MCB2000RB	MCBFCVR3	MCBDH1	—	MMEWVK03
3MCB2000RT	MCBFCVR3	MCBDH1	—	MMEWVK03

Main devices (continued)

Table 5. Main Fusible Switch

Catalog Numbers

Fusible Switch	Front Cover	Drip Hood	Endwall (with Knockouts)	Endwall (without Knockouts)
1MFS400RB	MMFCVR1	MMDH1	MMEW1	MMEWVK01
1MFS400RT	MFSFCVR1	MMDH1	—	MMEWVK01
1MFS600RB	MMFCVR1	MMDH1	MMEW1	MMEWVK01
1MFS600RT	MFSFCVR1	MMDH1	—	MMEWVK01
1MFS800RB	MMFCVR1	MMDH1	MMEW1	MMEWVK01
1MFS800RT	MFSFCVR1	MMDH1	—	MMEWVK01
1MFS1200RB	MFSFCVR2	MMDH2	MMEW2	MMEWVK02
3MFS400RB	MMFCVR1	MMDH1	MMEW1	MMEWVK01
3MFS400RT	MFSFCVR1	MMDH1	—	MMEWVK01
3MFS600RB	MMFCVR1	MMDH1	MMEW1	MMEWVK01
3MFS600RT	MFSFCVR1	MMDH1	—	MMEWVK01
3MFS800RB	MMFCVR1	MMDH1	MMEW1	MMEWVK01
3MFS800RT	MFSFCVR1	MMDH1	—	MMEWVK01
3MFS1200RB	MFSFCVR2	MMDH2	MMEW2	MMEWVK02

Table 6. Main Bolted Pressure Contact Switch

Catalog Numbers

Bolted Pressure Contact Switch	Front Cover	Drip Hood	Endwall (with Knockouts)	Endwall (without Knockouts)
1BPS1200RB	No replacement parts available at this time.			
1BPS1200RT				
3BPS1200RB				
3BPS1200RT				
3BPS1600RB				
3BPS1600RT				
3BPS2000RB				
3BPS2000RT				

Table 7. Main Fusible Switch with Pullbox

Catalog Numbers

Fusible Switch with Pullbox	Front Cover	Pullbox Cover	Drip Hood	Endwall (with Knockouts)	Endwall (without Knockouts)
1MFS400RUG	MFPFCVR1	MFPBCVR1	MMDH1	MMEW1	MMEWVK01
1MFS600RUG	MFPFCVR1	MFPBCVR1	MMDH1	MMEW1	MMEWVK01
1MFS800RUG	MFPFCVR1	MFPBCVR1	MMDH1	MMEW1	MMEWVK01
1MFS1200RUG	MFPFCVR2	MFPBCVR2	MMDH2	MMEW2	MMEWVK02
3MFS400RUG	MFPFCVR1	MFPBCVR1	MMDH1	MMEW1	MMEWVK01
3MFS600RUG	MFPFCVR3	MFPBCVR3	MMDH5	MMEW4	MMEWVK04
3MFS800RUG	MFPFCVR3	MFPBCVR3	MMDH5	MMEW4	MMEWVK04
3MFS1200RUG	MFPFCVR2	MFPBCVR2	MMDH2	MMEW2	MMEWVK02

Table 8. Pullbox

Catalog Numbers

Pullbox	Front Cover/Pullbox Cover	Drip Hood	Endwall (with Knockouts)	Endwall (without Knockouts)
1UGPB400R	PBFCVR1	PBDH1	PBEW1	PBEWVK01
1UGPB800R	PBFCVR2	PBDH2	PBEW2	PBEWVK02
1UGPB1200R	PBFCVR3	PBDH3	PBEW3	PBEWVK03
3UGPB400R	PBFCVR1	PBDH1	PBEW1	PBEWVK01
3UGPB800R	PBFCVR2	PBDH2	PBEW2	PBEWVK02
3UGPB1200R	PBFCVR3	PBDH3	PBEW3	PBEWVK03

Residential meter stacks

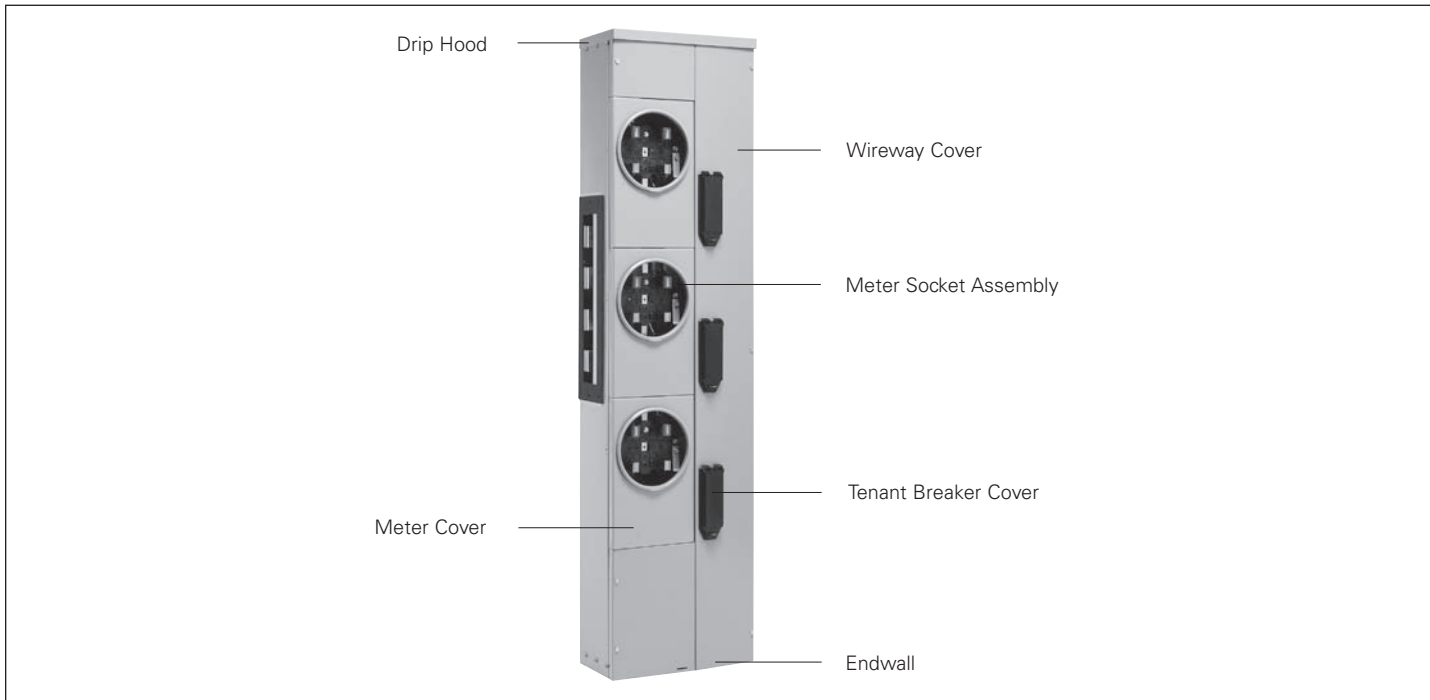 


Figure 3. Residential Meter Stack

Table 9. Residential Meter Stacks

Catalog Numbers

Meter Stack	Wireway Cover	Meter Socket Assembly	Tenant Breaker Cover	Meter Cover	Drip Hood	Endwall (with Knockouts)	Endwall (without Knockouts)	Vertical Busbar
3MM212	MMCCVR2123	—	①	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM1223VBUS
3MM212R	MMCCVR2123R	1MMMS	1MMBC1	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM1223VBUS
1MM312	MMCCVR3121	1MMMS	①	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM1223VBUS
1MM312R	MMCCVR3121R	1MMMS	1MMBC1	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM1223VBUS
3MM312	MMCCVR3123	1MMMS	①	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM1223VBUS
3MM312R	MMCCVR3123R	1MMMS	1MMBC1	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM1223VBUS
1MM412	MMCCVR4121	1MMMS	①	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM124VBUS
1MM412R	MMCCVR4121R	1MMMS	1MMBC1	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM124VBUS
3MM412	MMCCVR4123	1MMMS	①	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM124VBUS
3MM412R	MMCCVR4123R	1MMMS	1MMBC1	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM124VBUS
1MM512	MMCCVR5121	1MMMS	①	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM125VBUS
1MM512R	MMCCVR5121R	1MMMS	1MMBC1	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM125VBUS
3MM512	MMCCVR5123	1MMMS	①	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM125VBUS
3MM512R	MMCCVR5123R	1MMMS	1MMBC1	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM125VBUS
1MM612	MMCCVR6121	1MMMS	①	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM126VBUS
1MM612R	MMCCVR6121R	1MMMS	1MMBC1	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM126VBUS
3MM612	MMCCVR6123	1MMMS	①	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM126VBUS
3MM612R	MMCCVR6123R	1MMMS	1MMBC1	1MMCP1	MMDH3	MM12N1WLK	MM12N1WL	MM126VBUS
3MM220	MMCCVR2203	1MMMS	①	1MMCP2	MMDH4	MM20N1WLK	MM20N1WL	MM2023VBUS
3MM220R	MMCCVR2203R	1MMMS	1MMBC2	1MMCP2	MMDH4	MM20N1WLK	MM20N1WL	MM2023VBUS
1MM320	MMCCVR3201	1MMMS	①	1MMCP2	MMDH4	MM20N1WLK	MM20N1WL	MM2023VBUS
1MM320R	MMCCVR3201R	1MMMS	1MMBC2	1MMCP2	MMDH4	MM20N1WLK	MM20N1WL	MM2023VBUS
3MM320	MMCCVR3203	1MMMS	①	1MMCP2	MMDH4	MM20N1WLK	MM20N1WL	MM2023VBUS
3MM320R	MMCCVR3203R	1MMMS	1MMBC2	1MMCP2	MMDH4	MM20N1WLK	MM20N1WL	MM2023VBUS
1MM420	MMCCVR4201	1MMMS	①	1MMCP2	MMDH4	MM20N1WLK	MM20N1WL	MM204VBUS
1MM420R	MMCCVR4201R	1MMMS	1MMBC2	1MMCP2	MMDH4	MM20N1WLK	MM20N1WL	MM204VBUS

① NEMA® 1 meter stacks do not come with breaker covers.

Residential meter stacks (continued)**Table 9. Residential Meter Stacks (Continued)****Catalog Numbers**

Meter Stack	Wireway Cover	Meter Socket Assembly	Tenant Breaker Cover	Meter Cover	Drip Hood	Endwall (with Knockouts)	Endwall (without Knockouts)	Vertical Busbar
3MM420	MMCCVR4203	1MMMS	①	1MMCP2	MMDH4	MM20N1WLK	MM20N1WL	MM204VBUS
3MM420R	MMCCVR4203R	1MMMS	1MMBC2	1MMCP2	MMDH4	MM20N1WLK	MM20N1WL	MM204VBUS
3MM212RRL ②	MMCCVR2123R	1MMMS ③	1MMBC1	1MMRC125 ④	MMDH3	MM12NWLK	MM12NWL	MM1223VBUS
1MM312RRL ②	MMCCVR3121R	1MMMS ③	1MMBC1	1MMRC125 ④	MMDH3	MM12NWLK	MM12NWL	MM1223VBUS
3MM312RRL ②	MMCCVR3123R	1MMMS ③	1MMBC1	1MMRC125 ④	MMDH3	MM12NWLK	MM12NWL	MM1223VBUS
1MM412RRL ②	MMCCVR3121R	1MMMS ③	1MMBC1	1MMRC125 ④	MMDH3	MM12NWLK	MM12NWL	MM124VBUS
3MM412RRL ②	MMCCVR4123R	1MMMS ③	1MMBC1	1MMRC125 ④	MMDH3	MM12NWLK	MM12NWL	MM124VBUS
1MM512RRL ②	MMCCVR5121R	1MMMS ③	1MMBC1	1MMRC125 ④	MMDH3	MM12NWLK	MM12NWL	MM125VBUS
3MM512RRL ②	MMCCVR5123R	1MMMS ③	1MMBC1	1MMRC125 ④	MMDH3	MM12NWLK	MM12NWL	MM125VBUS
1MM612RRL ②	MMCCVR6121R	1MMMS ③	1MMBC1	1MMRC125 ④	MMDH3	MM12NWLK	MM12NWL	MM126VBUS
3MM612RRL ②	MMCCVR6123R	1MMMS ③	1MMBC1	1MMRC125 ④	MMDH3	MM12NWLK	MM12NWL	MM126VBUS
3MM220RRL ②	MMCCVR2203R	1MMMS ③	1MMBC2	1MMRC200	MMDH4	MM20NWLK	MM20NWL	MM2023VBUS
1MM320RRL ②	MMCCVR3201R	1MMMS ③	1MMBC2	1MMRC200	MMDH4	MM20NWLK	MM20NWL	MM2023VBUS
3MM320RRL ②	MMCCVR3203R	1MMMS ③	1MMBC2	1MMRC200	MMDH4	MM20NWLK	MM20NWL	MM2023VBUS
1MM420RRL ②	MMCCVR4201R	1MMMS ③	1MMBC2	1MMRC200	MMDH4	MM20NWLK	MM20NWL	MM204VBUS
3MM420RRL ②	MMCCVR4203R	1MMMS ③	1MMBC2	1MMRC200	MMDH4	MM20NWLK	MM20NWL	MM204VBUS

① NEMA® 1 meter stacks do not come with breaker covers.

② For catalog numbers with a "B" suffix (ringless with horn bypass), all replacement parts are the same with the exception of the meter socket assembly. Refer to Footnote 2 for correct catalog number.

③ For ringless style meter stacks with horn bypass, order 1MMMSB meter socket assembly.

④ For top position, use meter socket cover 1MMRC125T.

Commercial meter stacks**Table 10. Commercial Meter Stacks (Lever Bypass)****Catalog Numbers**

Meter Stack	Wireway Cover	Wireway Cover	Meter Socket Assembly	Tenant Breaker Cover	Meter Cover	Meter Cover	Drip Hood	Endwall (with Knockouts)	Endwall (without Knockouts)
35MM120R12	MSLWCVR1	—	MSLMSA1	MSBCVR1	MSLMCVR1 ①	37MMSK1 ②	MSLDH1	—	MSLEW1
35MM220R12	MSLWCVR2	—	MSLMSA1	MSBCVR1	MSLMCVR1 ①	37MMSK1 ②	MSLDH1	—	MSLEW1
35MM320R12	MSLWCVR3	—	MSLMSA1	MSBCVR1	MSLMCVR1 ①	37MMSK1 ②	MSLDH1	—	MSLEW1
35MM420R12	MSLWCVR4 ①	MSLWCVR13 ②	MSLMSA1	MSBCVR1	MSLMCVR1 ①	37MMSK1 ②	MSLDH2	—	MSLEW2
37MM140R12	MSLWCVR9 ①	MSLWCVR14 ②	MSLMSA2	MSBCVR1	MSLMCVR1 ①	37MMSK1 ②	MSLDH1	—	MSLEW1
37MM120R12	MSLWCVR5 ①	MSLWCVR15 ②	MSLMSA2	MSBCVR1	MSLMCVR1 ①	37MMSK1 ②	MSLDH1	—	MSLEW1
37MM220R12	MSLWCVR6 ①	MSLWCVR16 ②	MSLMSA2	MSBCVR1	MSLMCVR1 ①	37MMSK1 ②	MSLDH1	—	MSLEW1
37MM320R12	MSLWCVR7 ①	MSLWCVR17 ②	MSLMSA2	MSBCVR1	MSLMCVR1 ①	37MMSK1 ②	MSLDH1	—	MSLEW1
37MM420R12	MSLWCVR8 ①	MSLWCVR18 ②	MSLMSA2	MSBCVR1	MSLMCVR1 ①	37MMSK1 ②	MSLDH2	—	MSLEW2

① Used for product built October 2002 and prior.

② Used for product built after October 2002.

Commercial meter stacks (continued)**Table 11. Commercial Meter Stack (Test Bypass)****Catalog Numbers**

Meter Stack	Wireway Cover	Meter Socket Assembly	Tenant Breaker Cover	Meter Cover	Drip Hood	Endwall (with Knockouts)	Endwall (without Knockouts)
35SS120RAB	MSTWCVR1	MSTMSA1	MSBCVR1	MSTMCVR1	MSTDH1	MSTEW1	MSTEWNK01
35SS120RAC	MSTWCVR2	MSTMSA1	MSBCVR1	MSTMCVR1	MSTDH1	MSTEW1	MSTEWNK01
35SS120RBC	MSTWCVR3	MSTMSA1	MSBCVR1	MSTMCVR1	MSTDH1	MSTEW1	MSTEWNK01
35SS220RAB	MSTWCVR4	MSTMSA1	MSBCVR1	MSTMCVR1	MSTDH1	MSTEW2	MSTEWNK02
35SS220RAC	MSTWCVR5	MSTMSA1	MSBCVR1	MSTMCVR1	MSTDH1	MSTEW2	MSTEWNK02
35SS220RBC	MSTWCVR6	MSTMSA1	MSBCVR1	MSTMCVR1	MSTDH1	MSTEW2	MSTEWNK02
35SS320RAB	MSTWCVR7	MSTMSA1	MSBCVR1	MSTMCVR1	MSTDH1	MSTEW2	MSTEWNK02
35SS320RAC	MSTWCVR8	MSTMSA1	MSBCVR1	MSTMCVR1	MSTDH1	MSTEW2	MSTEWNK02
35SS320RBC	MSTWCVR9	MSTMSA1	MSBCVR1	MSTMCVR1	MSTDH1	MSTEW2	MSTEWNK02
37SS120R	MSTWCVR10	MSTMSA2	MSBCVR1	MSTMCVR1	MSTDH1	MSTEW1	MSTEWNK01
37SS220R	MSTWCVR11	MSTMSA2	MSBCVR1	MSTMCVR1	MSTDH1	MSTEW2	MSTEWNK02
37SS320R	MSTWCVR12	MSTMSA2	MSBCVR1	MSTMCVR1	MSTDH1	MSTEW2	MSTEWNK02

Miscellaneous parts**Table 12. Miscellaneous Parts**

Description	Part Number
Phase balancing kit, single-phase commercial metering	99-4177-3
A and C phase balancing kit (3MM)	99-4184
Breaker mounting kit, commercial metering (one three-pole breaker per kit)	99-4176-2
Breaker mounting kit, 1MM/1MP, 200A, (one two-pole breaker per kit)	99-4176
Mounting kit, meter center	99-4172
Mounting kit, meter pack	99-4173
Bonding strap kit, all meter packs (except CECHA three and four socket)	99-4174
Bonding strap kit, CHECA three and four socket meter packs	99-2379
Sealing screw kit, ringless devices (six screws)	99-4175
Sealing screw kit, three and four meter sockets, ringless devices (four screws)	99-2589
Padlock bracket	99-2512-5
Mounting bracket kit—All breaker and fusible mains	99-4183
Mounting bracket kit—400A and 600A 3MTB	99-4183-3
Exterior breaker cover	49-6070

Eaton Corporation
 Electrical Sector
 1111 Superior Ave.
 Cleveland, OH 44114
 United States
 Eaton.com

© 2012 Eaton Corporation
 All Rights Reserved
 Printed in USA
 Publication No. RP00501001E / Z11822
 January 2012

Eaton is a registered trademark
 of Eaton Corporation.

All other trademarks are property
 of their respective owners.